

Cables for Software updating



CONFIGURATION OVERVIEW – 4.4.0 / 2010.07

© 2010 Arnold & Richter Cine Technik GmbH & Co. Betriebs KG. All rights reserved. This material is provided "as is" for information purposes only without any warranty. ARRI assumes no responsibility with regard to the performance or use of the products or typographical errors or inaccuracies of given information. Product specifications are subject to change without notice. For a full listing of all available components consult the price list.




LAPTOP/PC with RS 232 connector

If no RS 232 connector is available on your PC, please use a USB to serial adapter.

We are using and have tested the following adapter:

ATEN UC232A

Available at: www.aten-usa.com

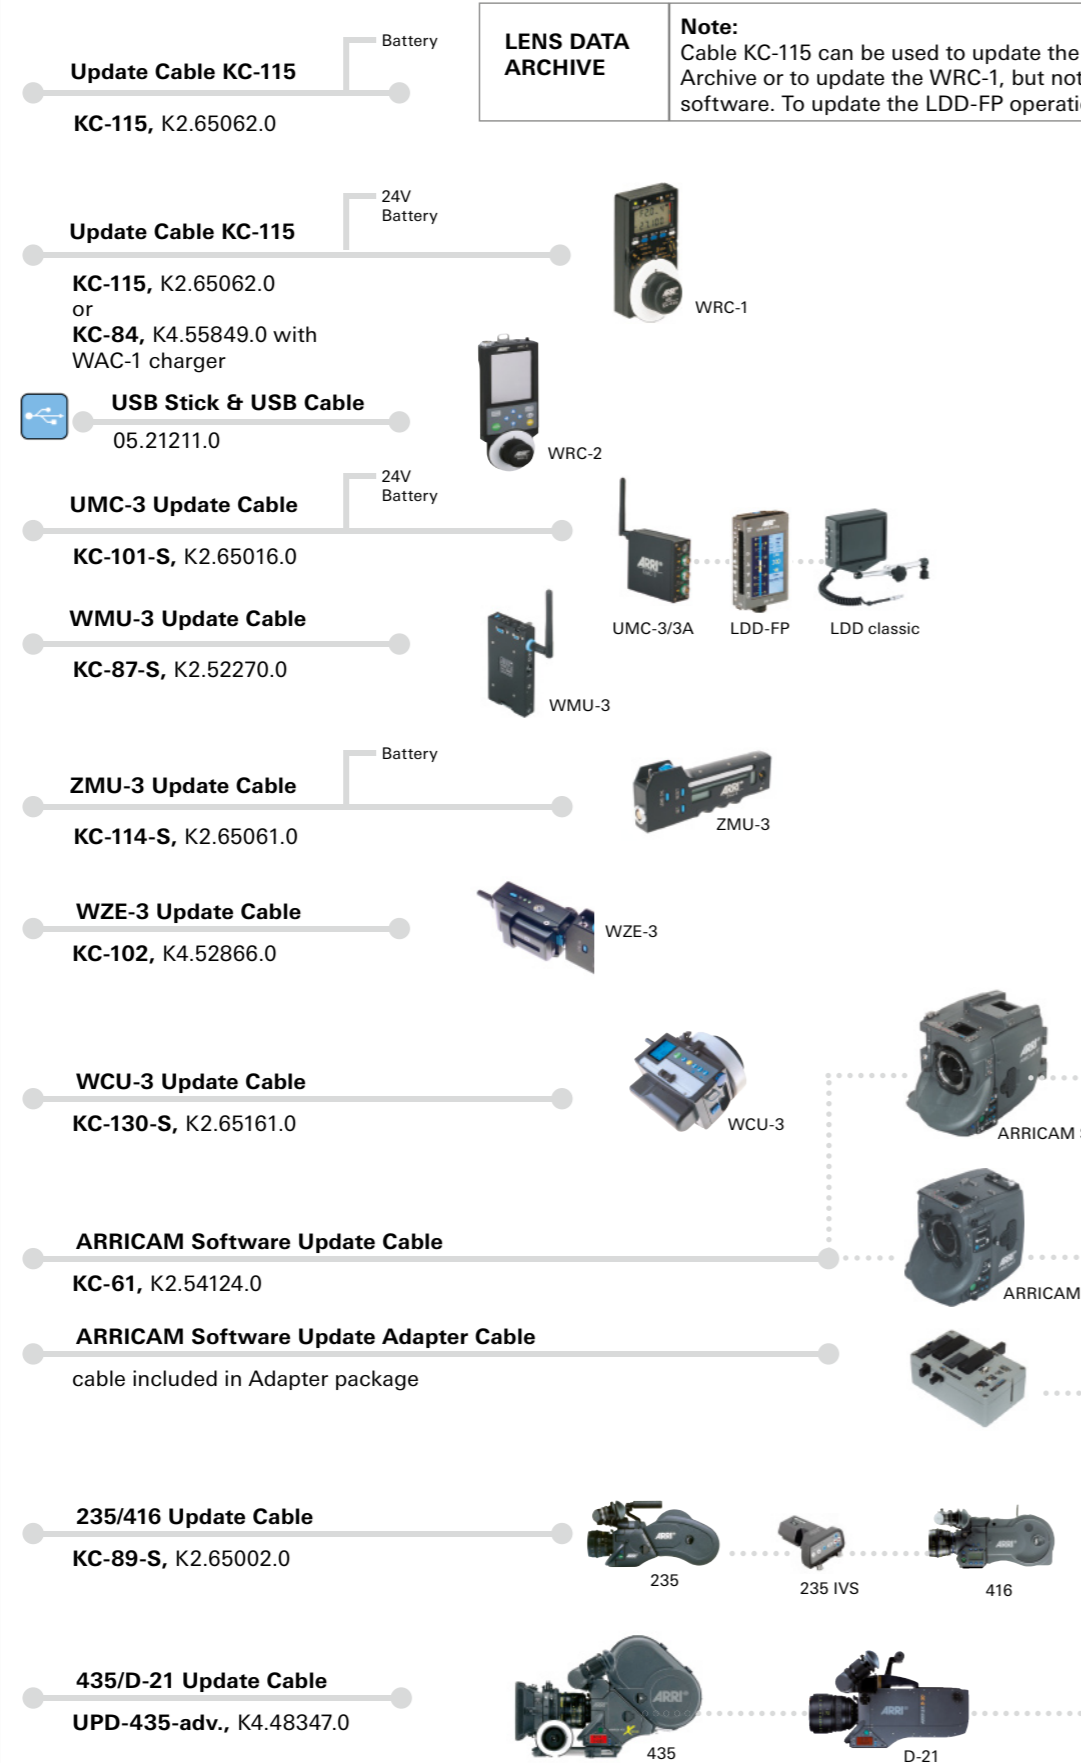

Notes:
Depending on configuration, following equipment may be necessary for updating:
Studio Viewfinder
Studio 100% Video Top Connection cables

Notes:
Update via **ARRICAM Studio/Lite** only with CAC distribution box K2.54130.0

Update via **Software Update Adapter** possible without CAC distribution box

Notes:
Depending on configuration, following equipment may be necessary for updating:
Lite Viewfinder
Lite 100% Video Top Connection cables
Lite Frame Glow
(For LDD-FP and LDD Classic)

For older FEM-2 models: the FEM-2 update adapter (K4.54771.0) must be used in addition to the 435 update cable.

